


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Intake Manifold](#) (303-01B Engine, Removal and Installation).
2. **NOTE:** Note the position of the component before removal.
NOTE: Make sure that the component is installed to the position noted before removal.

Torque: 18 Nm

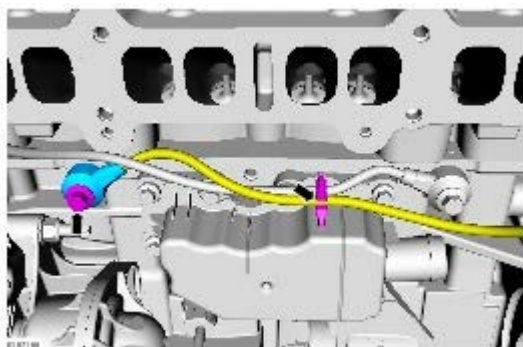

Installation

1. To install, reverse the removal procedure.