


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.

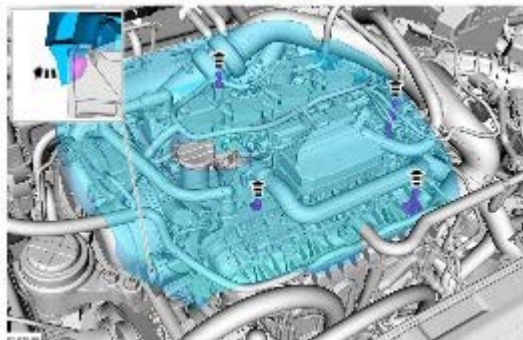

2. Torque: 10 Nm

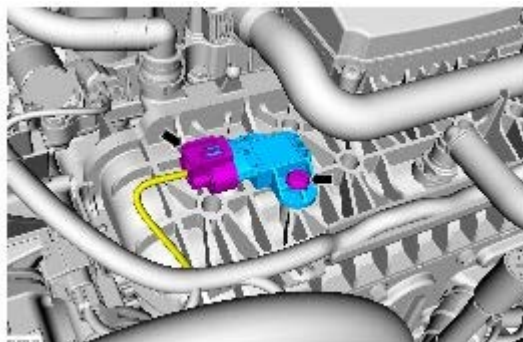

Installation

1. To install, reverse the removal procedure.