


## Removal and Installation


### Removal

NOTE: Removal steps in this procedure may contain installation details.

1.

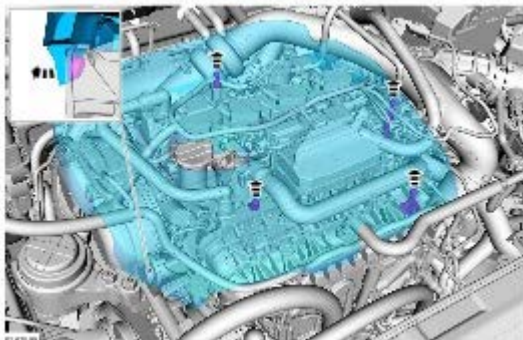

2. Torque: 8 Nm

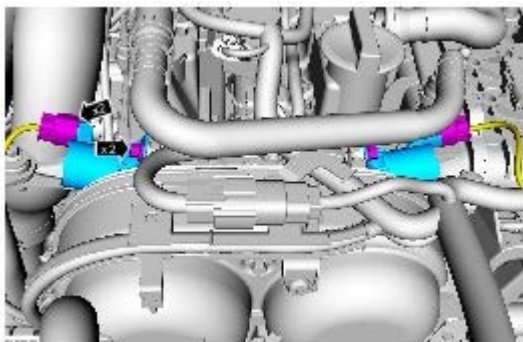

### Installation

1. To install, reverse the removal procedure.