


Climate Control System - General Information - Climate Control System—Vehicles With: Dual Automatic Temperature Control (DATC) - Component Location




Description and Operation

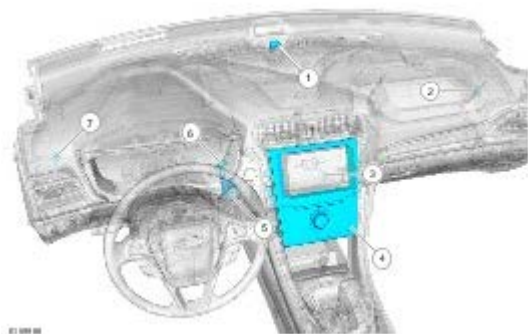


Item Description

- 1 Sunload Sensor
- 2 Passenger Side Register Air Discharge Temperature Sensor
- 3 Passenger Side Footwell Air Discharge Temperature Sensor
- 4 HVAC (heating, ventilation and air conditioning) Module
- 5 In-vehicle temperature & humidity Sensor
- 6 Driver Side Footwell Air Discharge Temperature Sensor
- 7 Driver Side Register Air Discharge Temperature Sensor

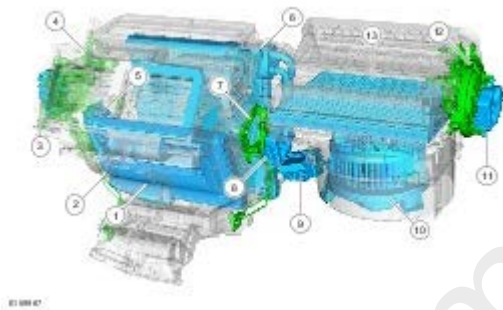

Item Description

- 1 Heater Core
- 2 Evaporator Temperature Sensor
- 3 Air Distribution Door Actuator
- 4 Air Distribution Door Actuating Assembly
- 5 Driver Side Temperature Door Actuator
- 6 Evaporator
- 7 Passenger Side Temperature Door Actuating Assembly
- 8 Passenger Side Temperature Door Actuator
- 9 Blower Motor Speed Control
- 10 Blower Motor
- 11 Air Inlet Door Actuator
- 12 Air Inlet Door Actuating Assembly
- 13 Cabin Air Filter

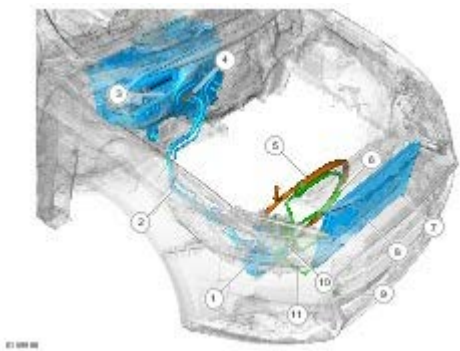

Item Description

- 1 A/C (air conditioning) Compressor
- 2 Evaporator Inlet and Outlet Manifold
- 3 Climate Control Housing
- 4 Thermostatic Expansion Valve
- 5 A/C Compressor Inlet Line
- 6 A/C Compressor Outlet Line
- 7 Receiver Drier Element
- 8 Condenser
- 9 Ambient Air Temperature Sensor
- 10 A/C Pressure Transducer
- 11 Condenser Outlet Line

Vehicles equipped with Auto Start Stop



Item Description

- 1 Cabin Heater Coolant Pump Inlet Hose
- 2 Cabin Heater Coolant Pump Outlet Hose
- 3 Cabin Heater Coolant Pump