

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1.  **WARNING:** Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Climate Control System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


2.




3. Torque: 7 Nm

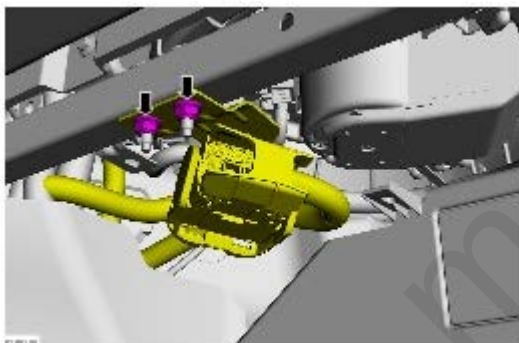


4.

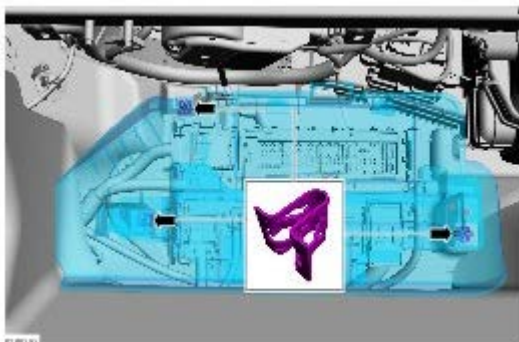

5. Torque: 6 Nm

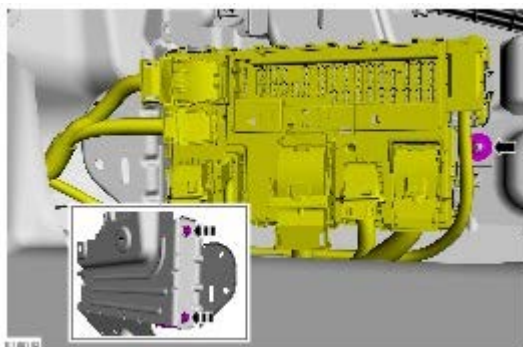

6.

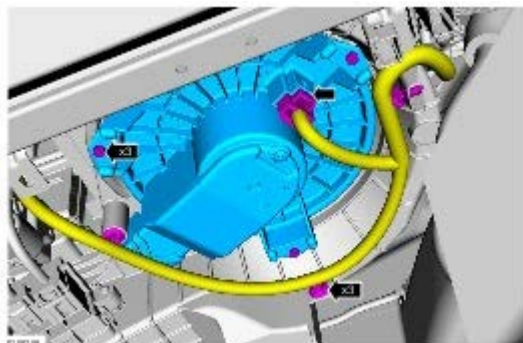

Installation

1. To install, reverse the removal procedure.