

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1.  **WARNING:** Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Climate Control System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. **NOTE:** The evaporator temperature sensor is available only as part of the climate control housing.

Refer to: [Climate Control Housing - Vehicles With: Dual Automatic Temperature Control \(DATC\)](#) (412-00 Climate Control System - General Information, Removal and Installation).

Refer to: [Climate Control Housing - Vehicles With: Electronic Manual Temperature Control \(EMTC\)](#) (412-00 Climate Control System - General Information, Removal and Installation).

Installation

1. Transfer the components from the old housing to the new housing as needed.
2. To install, reverse the removal procedure.