

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1.  **WARNING:** Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. Remove the rear door trim panel.

Refer to: [Rear Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Torque: 2.5 Nm

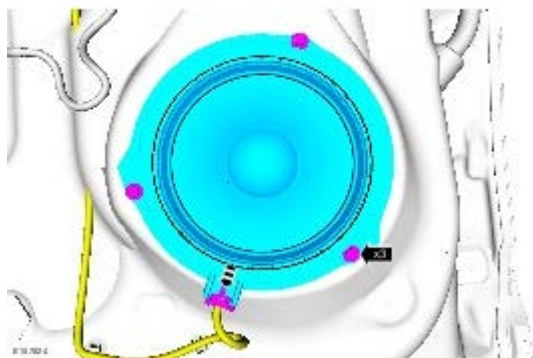

Installation

1. To install, reverse the removal procedure.