

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1.  **WARNING:** Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2.



3. Torque: 2 Nm

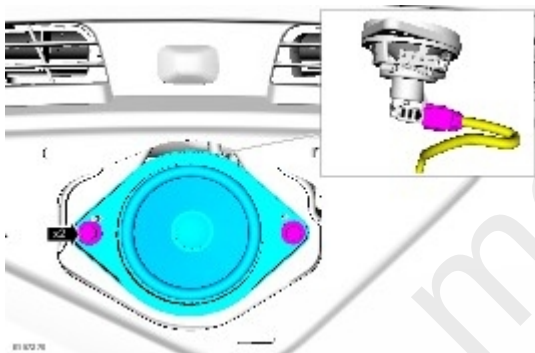

Installation

1. To install, reverse the removal procedure.