


Removal and Installation


Removal

1.

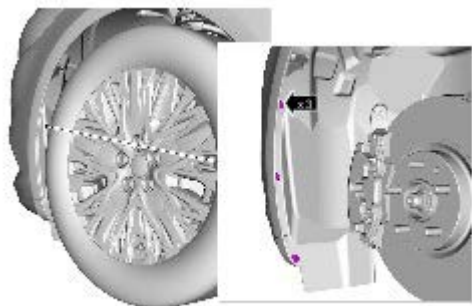


81 602 06

2.

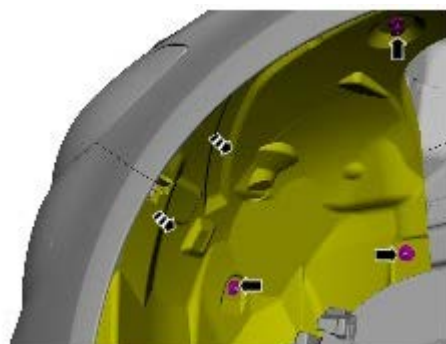


82C 99 02

3.

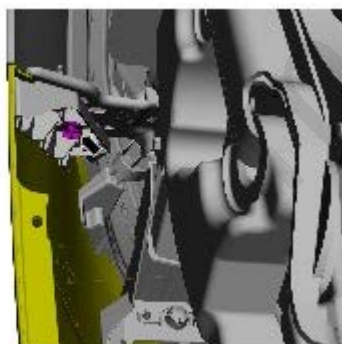


82C 99 01

4.

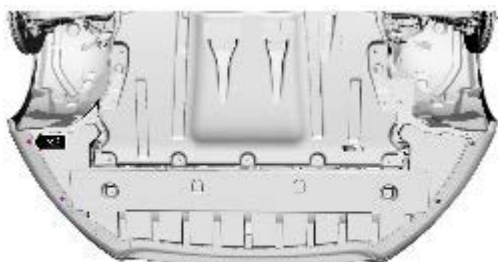

81 602 05

5.

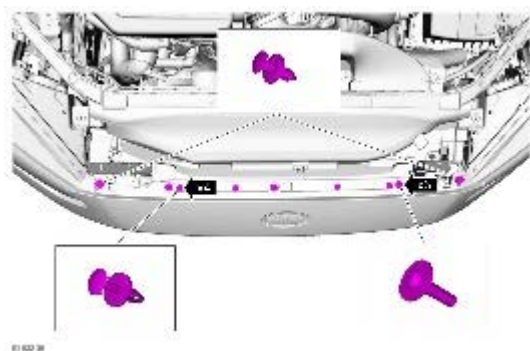


6. If equipped.




7.




8.

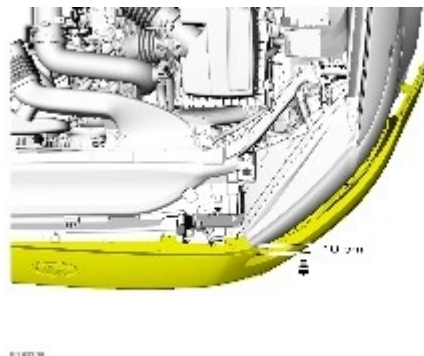

9. LH (left-hand)

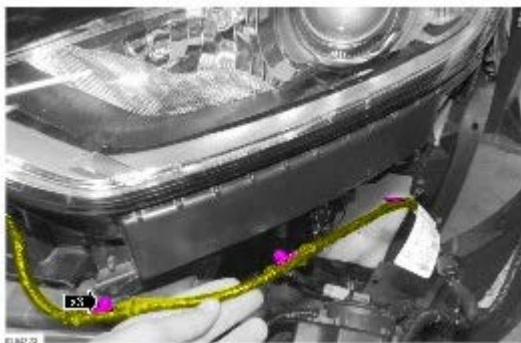


10.

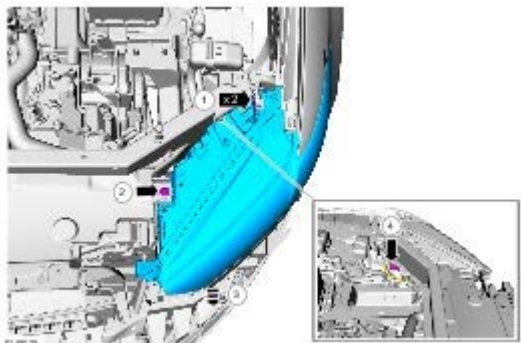

Installation


1. **NOTE:** Only tighten the bolts finger tight at this stage.

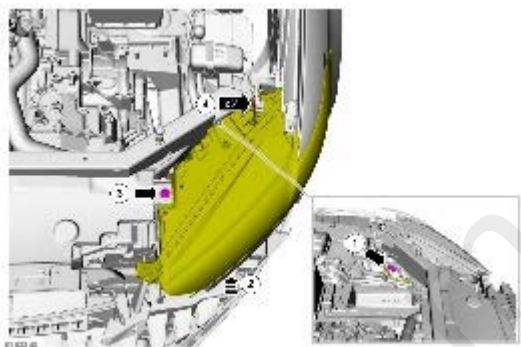

2. After operation check the alignment and correct if necessary.




3. **Torque:** 3.6 Nm

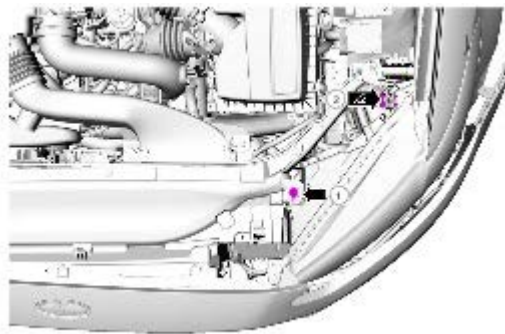

81 807 02

4. LH

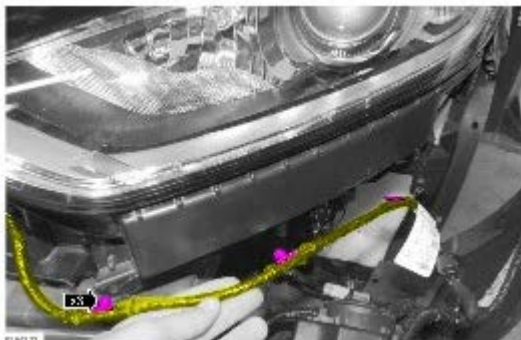

81 807 73

5.




81 807 38

6. If equipped.




81 807 75


7.

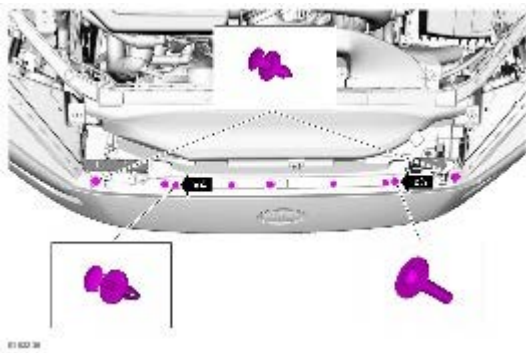


8.

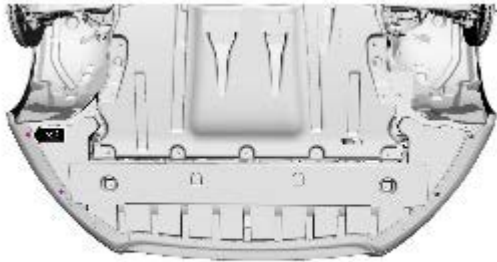

9.

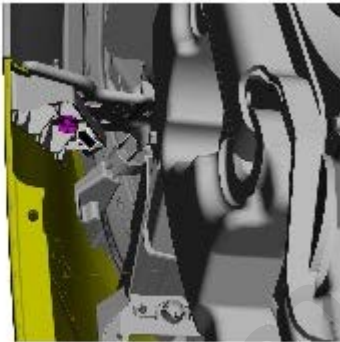

10.

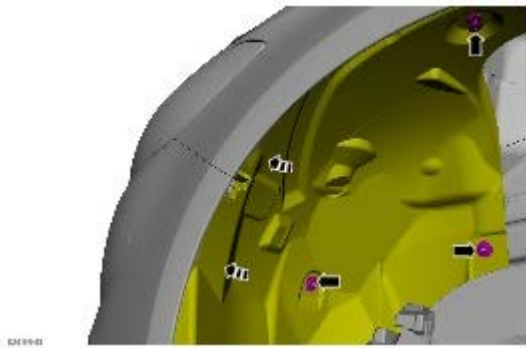

11.



81 602 26

12. Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).

mcx30.com