


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1.

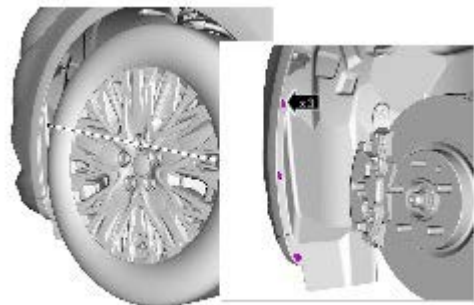


81-6027-06

2.

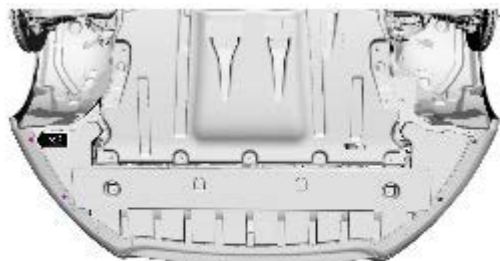

81-6062-23

3.

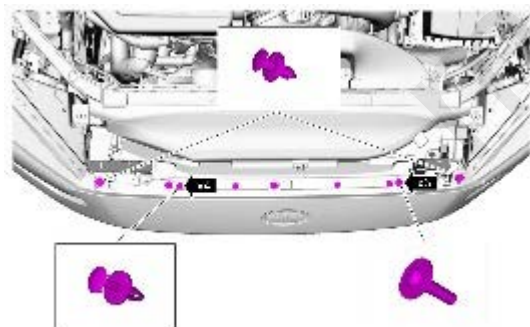

81-6027-06

4. If equipped.




5.




6.  NOTICE: Make sure that the components are not forcibly bent.




7. NOTE: LH (left-hand)

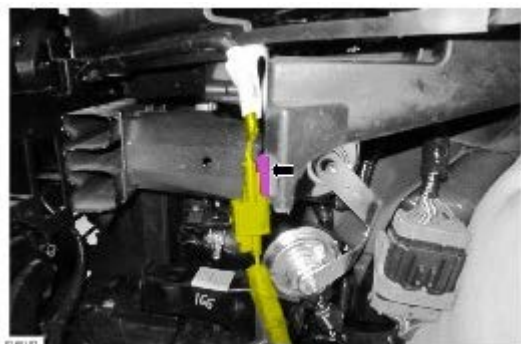

8. Torque: 3.6 Nm

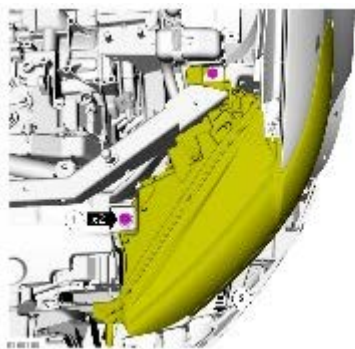


9.

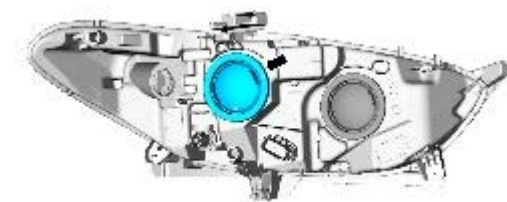

10.




11.

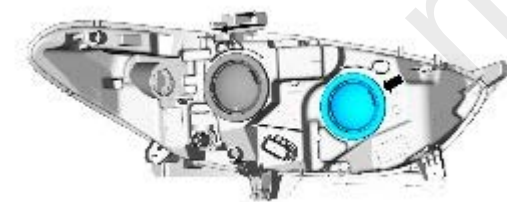

12.


- 1.
- 2.

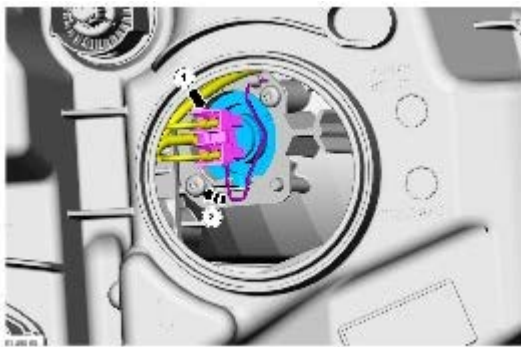

13.



14.

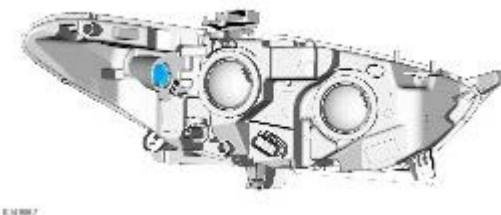


Installation


1. To install, reverse the removal procedure.
2. After operation check the alignment and correct if necessary.



3. Torque: 3.6 Nm

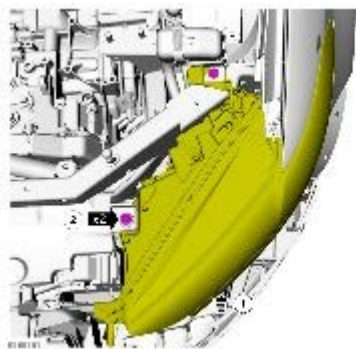

4. NOTE: LH

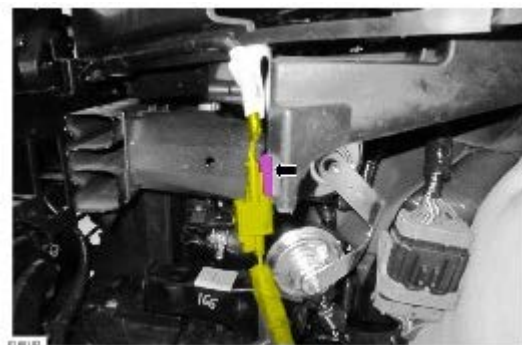

5.



6. If equipped.



7.

