


Removal and Installation


Removal

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2.

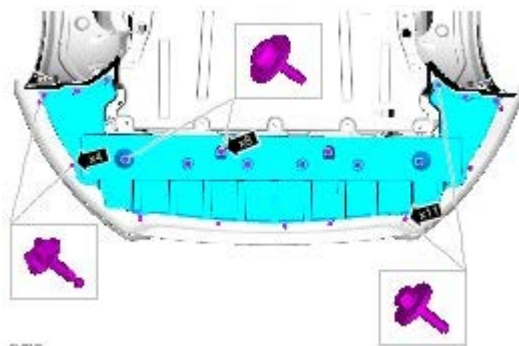

3.

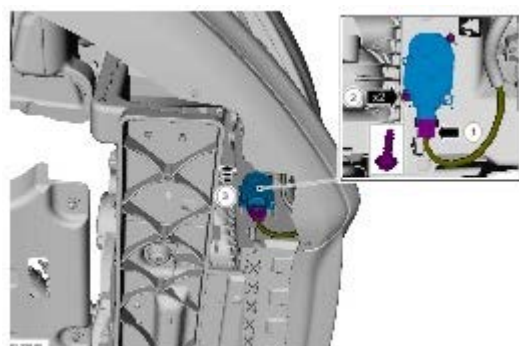

Installation

1. To install, reverse the removal procedure.