

General Procedures

Check

1. Check body to front door dimensions.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

Adjustment

NOTE: LH (left-hand) side shown, RH (right-hand) side similar.

All alignments

1. Check body to front door dimensions.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

- 2.




Front door in and out, up and down alignment

3. Torque: 48 Nm



4. Adjust door to specification.


Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

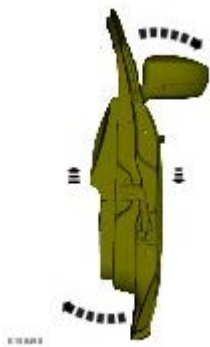


Front door fore, aft and tilt alignment

5. Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

6. Torque: 30 Nm

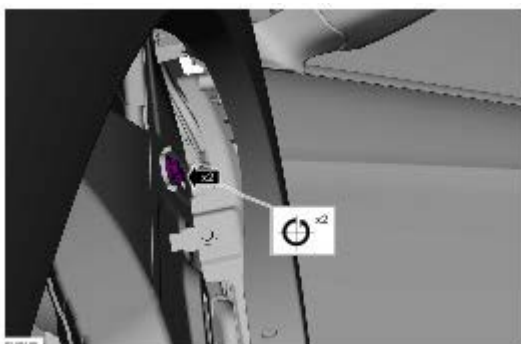


7. Torque: 30 Nm

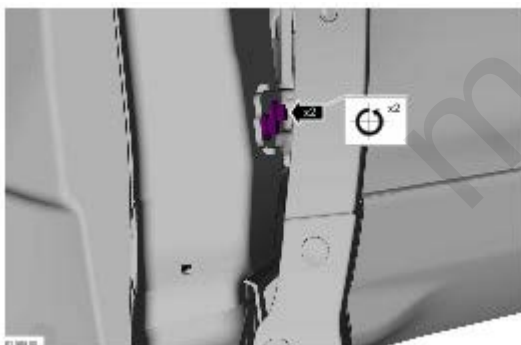


8. Adjust door to specification.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

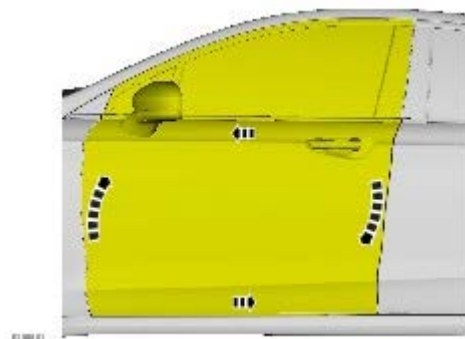

All alignments

9. **NOTE:** Only tighten the bolts finger tight at this stage.

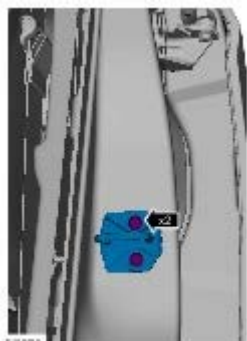

10. Adjust door to specification.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).
Torque: 25 Nm



11. Check body to front door dimensions.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).