

General Procedures

Inspection

NOTE: Removal steps in this procedure may contain installation details.

All alignments

1. Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

Hood fore and aft, left and right alignments

- 2.



3. Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).




4. Torque: 25 Nm



Hood front up and down alignments

- 5.

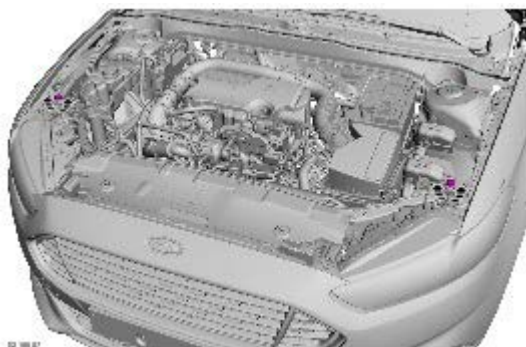

6. Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).



All alignments

7. Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).



8. Install the removed components.