


General Procedures

Activation


1. Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

2.

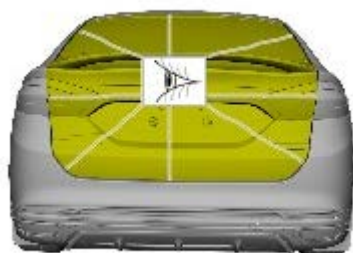

501-26


3.

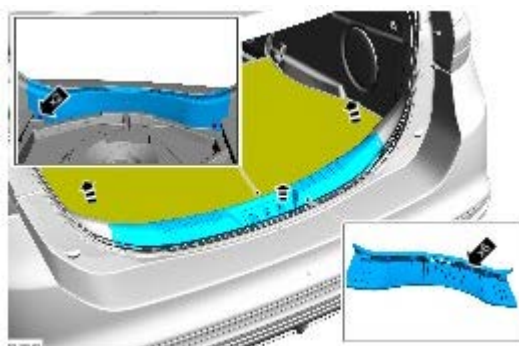

4.




5.

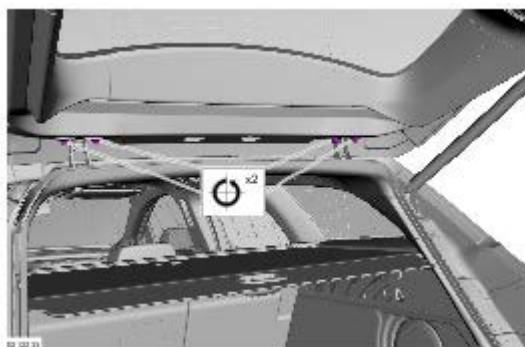

6.




7. Torque: 30 Nm

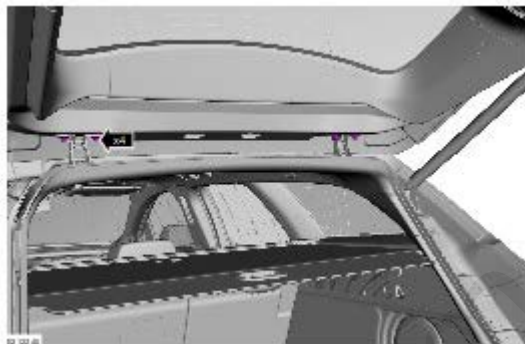


8. Refer to: [D-Pillar Trim Panel - 5-Door](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

9.

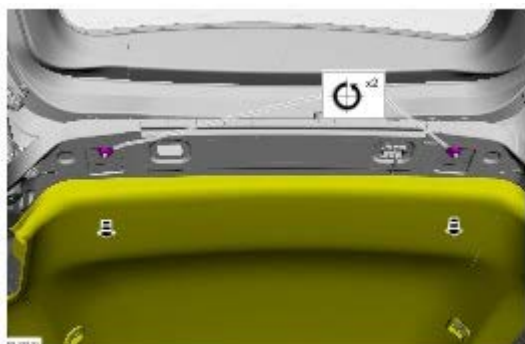

10.

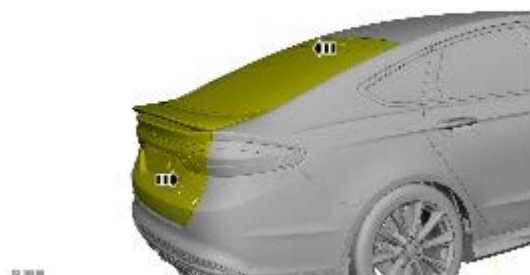

11. Torque: 50 Nm




12. After operation check the alignment and correct if necessary.




13. Refer to: [D-Pillar Trim Panel - 5-Door](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

14.

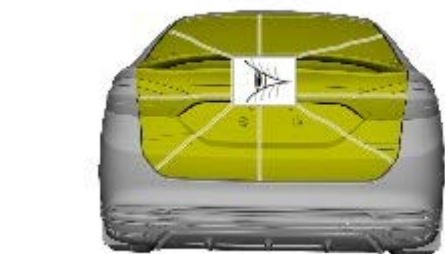

15.

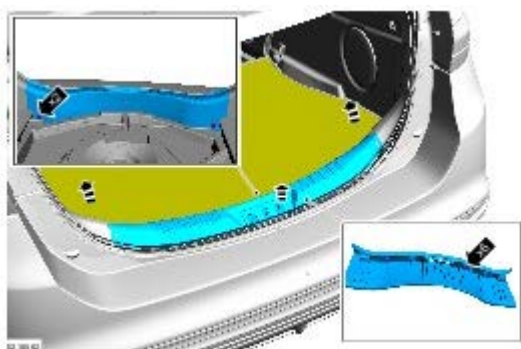

16. If equipped.

Refer to: [Power Liftgate Initialization](#) (501-03 Body Closures, General Procedures).

mcx30.com