


Removal and Installation

Removal


5-Door

1. Refer to: [D-Pillar Trim Panel - 5-Door](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

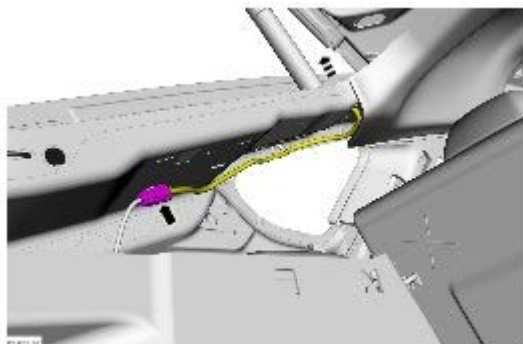

3.

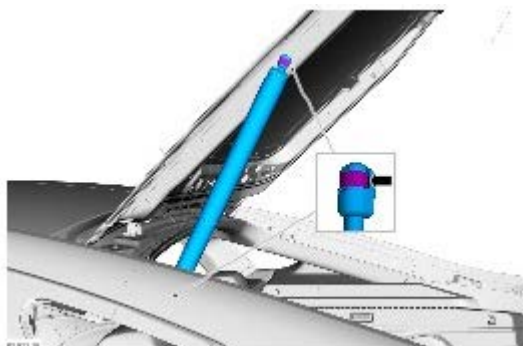

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.

Refer to: [Power Liftgate Initialization](#) (501-03 Body Closures, General Procedures).