

General Procedures

Initialization



WARNING: Keep objects and body parts clear of the roof panel blind when carrying out the initialization procedure. During the initialization procedure, the roof panel blind closes with high force and cannot detect objects in its path. Failure to follow this instruction may result in serious personal injury.

NOTE: If initializing both motors, initialize the roof opening panel motor before initializing the roof opening panel blind motor.

NOTE: A new roof panel blind motor must be initialized after installation. It will only move toward the closed position until initialized.

NOTE: The roof panel blind motor initialization procedure must be done when repairs are carried out on any part of the roof opening panel blind system, including: any time the roof opening panel blind motor has been removed from the roof opening panel blind assembly, a new roof opening panel blind motor has been installed or when a new roof opening panel blind assembly has been installed.

1. **NOTE:** The roof opening panel blind and the sunroof must start out in the fully closed position.
Ignition ON and wait for 30 seconds.
2. Press Moon Roof Shade Open for 2 seconds and release it for 2 Seconds.
3. Press Moon Roof Shade Open for 2 seconds and release it again.
4. Within < 5 seconds after step 2, press Moon Roof Shade Close for 2 seconds and release it for 2 seconds.
5. Press Moon Roof Shade Close for 2 seconds and release it again.
6. Within < 5 seconds after step 4, press Moon Roof Shade Open without releasing to move the sunblind in forward direction to the mechanical end stop (HS).
7. Within < 15 seconds after step 5, press Moon Roof Shade Close without releasing to move the sunblind in rearward direction to the mechanical end stop (HS).
8. Learning process is finished.