


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1.

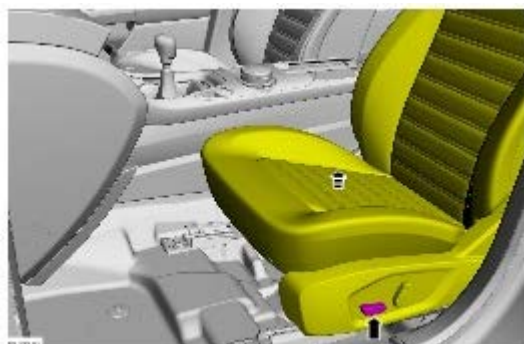

2.

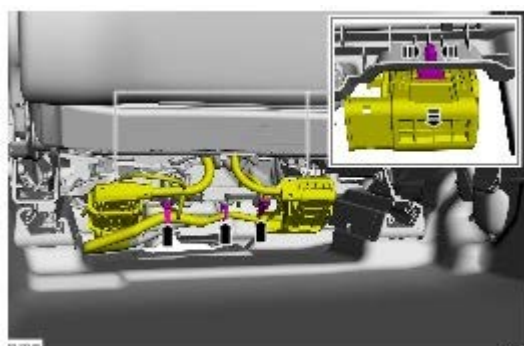

3.

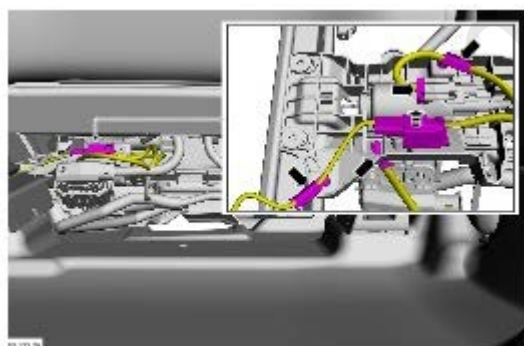


4.


1.

2.  NOTICE: Only use moderate force.

3.  NOTICE: Only use moderate force.

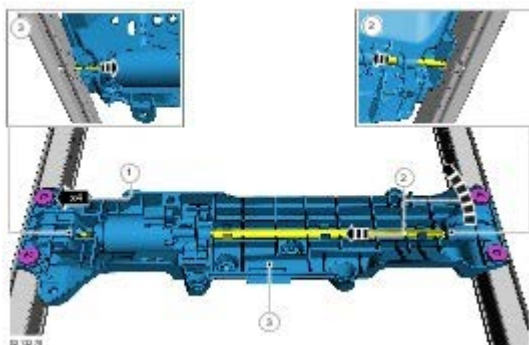

5.

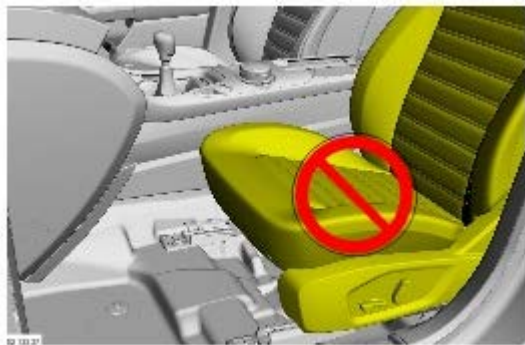

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** Make sure that new bolts are installed.
NOTE: Install all the bolts finger tight before final tightening.

Torque: 28 Nm

