

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Rear Seat Cushion](#) (501-10B Rear Seats, Removal and Installation).

NOTE: It is necessary to remove the 40 percent seatback side before the 60 percent will release.


- 2.




3. If equipped.



- 4.

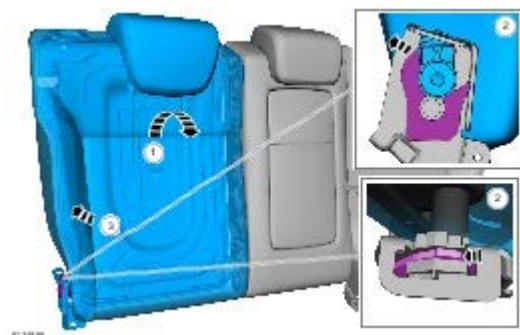

5. Torque: 48 Nm

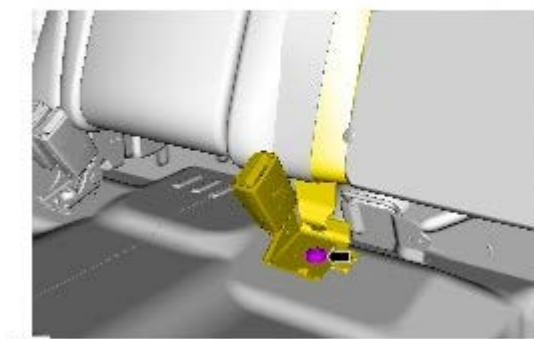

Vehicles with inflatable safety belts

6. Torque: 48 Nm




All vehicles


7.



8. If equipped.

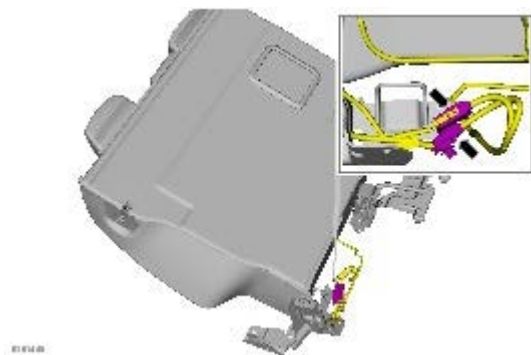

9.

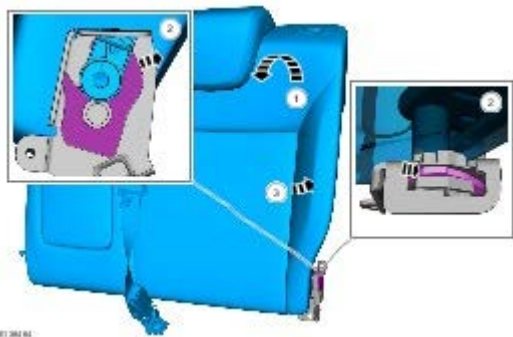

Installation

1. To install, reverse the removal procedure.