


Removal and Installation


Removal

1. Refer to: [Front Door Window Glass](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).


2.

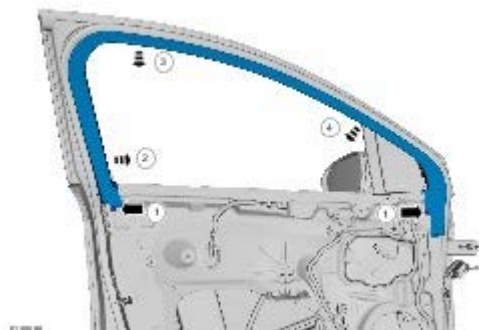

3.

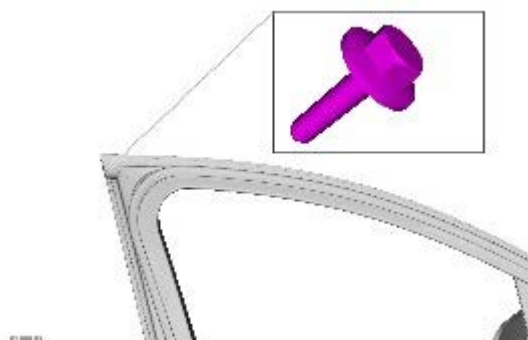

4.

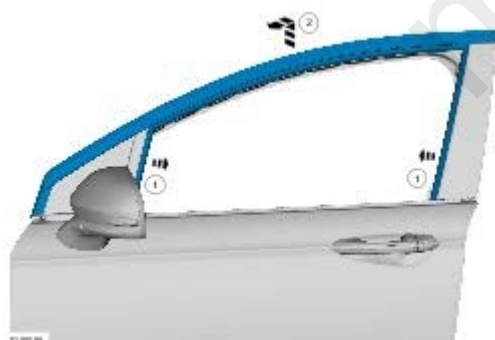

Installation

1. To install, reverse the removal procedure.
2. Refer to: Power Door Window Initialization (501-11, General Procedures).