


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

LH (left-hand)

1. Torque: 9 Nm

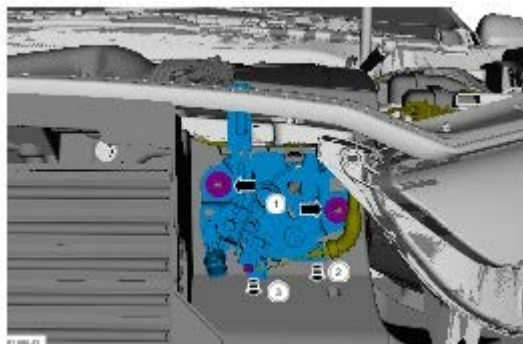

- 2.

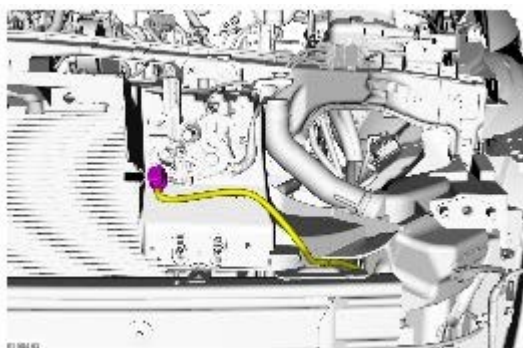


- 3.



RH (right-hand)

4. Torque: 9 Nm

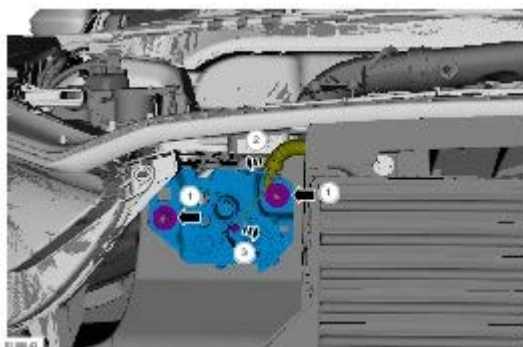

5.



Installation

1. To install, reverse the removal procedure.