


Removal and Installation

Removal

1. Refer to: [Loadspace Trim Panel - 4-Door](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Loadspace Trim Panel - 5-Door](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Loadspace Trim Panel - Wagon](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

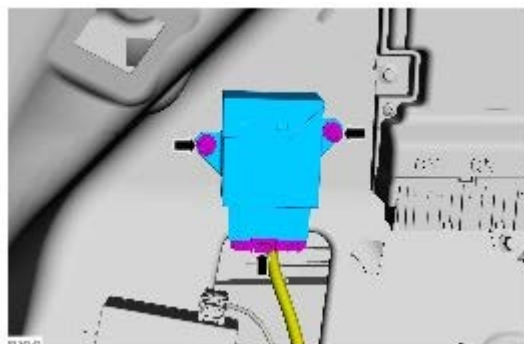

Installation

1. To install, reverse the removal procedure.