

- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST I : THE TEMPERATURE GAUGE IS INOPERATIVE > PINPOINT TEST I : THE TEMPERATURE GAUGE IS INOPERATIVE

I1 RETRIEVE THE RECORDED DTCS FROM THE PCM (POWERTRAIN CONTROL MODULE) SELF-TEST

Ignition ON.

Using a diagnostic scan tool, perform the PCM self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	Refer to the appropriate article for the procedure.
No	GO to I2

I2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Check for recorded Diagnostic Trouble Codes (DTCs) from the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to I3

I3 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
No	GO to I4

I4 PERFORM THE TEMPERATURE GAUGE ACTIVE COMMAND USING THE DIAGNOSTIC SCAN TOOL