

airbag warning indicator to its last indication state (on or off), based upon the last message received.

If the airbag indicator lamp request message is missing for 5 seconds or longer, the IPC defaults the airbag warning indicator on.

Possible Sources

- Communication concern
- SRS concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST O : THE AIRBAG WARNING INDICATOR IS NEVER OR ALWAYS ON > PINPOINT TEST O : THE AIRBAG WARNING INDICATOR IS NEVER OR ALWAYS ON

O1 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Ignition ON.

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to O2

O2 PERFORM THE RCM (RESTRAINTS CONTROL MODULE) SELF-TEST

Ignition ON.

Using a diagnostic scan tool, perform the RCM self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Airbag Supplemental Restraint System (SRS) .
No	GO to O3

O3 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).