

Command the LED low beam malfunction indicator on then off. Observe the LED low beam malfunction indicator.

Does the LED low beam malfunction indicator illuminate when commanded on and turn off when commanded off?

Yes	DIAGNOSE all BCM Diagnostic Trouble Codes (DTCs). REFER to: Body Control Module (BCM) .
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST S : THE LH (LEFT-HAND) - RH (RIGHT-HAND) TURN SIGNAL, FRONT FOG LAMP OR HIGH BEAM INDICATOR IS NEVER OR ALWAYS ON

Normal Operation and Fault Conditions

See LH- RH Turn Signal Indicator, Front Fog Lamp Indicator Or High Beam Indicator. REFER to: Instrument Panel Cluster (IPC) - System Operation and Component Description .

If the turn indication data, fog lamp indicator or high beam status message is missing for less than 5 seconds, the IPC defaults the turn signal, fog lamp or high beam indicator to its last indication state (on or off), based upon the last message received.

If the turn indication data, fog lamp indicator or high beam status message is missing for 5 seconds or longer, the IPC defaults the turn signal, fog lamp or high beam indicator off.

Possible Sources

- Turn signal concern
- Front Fog lamp concern
- High beam concern
- Communication concern
- BCM concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST S : THE LH (LEFT-HAND) - RH (RIGHT-HAND) TURN SIGNAL, FRONT FOG LAMP OR HIGH BEAM INDICATOR IS NEVER OR ALWAYS ON > PINPOINT TEST S : THE LH (LEFT-HAND) - RH