

V10 CHECK THE SELECTOR LEVER GROUND CIRCUIT FOR AN OPEN

Measure:

Positive Lead	Measurement / Action	Negative Lead
C3245-2	Ω	Ground

Is the resistance less than 3 ohms?

Yes	GO to V11
------------	-----------

No	REPAIR the circuit.
-----------	---------------------

V11 CHECK FOR CORRECT IPC (INSTRUMENT PANEL CLUSTER) OPERATION

Ignition OFF.

Disconnect and inspect the IPC connector.

Repair:

corrosion (install new connector or terminals - clean module pins)

damaged or bent pins - install new terminals/pins

pushed-out pins - install new pins as necessary

Reconnect the IPC connector. Make sure it seats and latches correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .
------------	--

No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.
-----------	--

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST W : THE REAR FOG LAMP INDICATOR IS NEVER OR ALWAYS ON (IF EQUIPPED)

Normal Operation and Fault Conditions

See Rear Fog Lamp Indicator. REFER to: Fog Lamps .