

No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .
-----------	---

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST Z : THE STABILITY-TRACTION CONTROL DISABLED INDICATOR (SLIDING CAR OFF ICON) IS NEVER OR ALWAYS ON

Normal Operation and Fault Conditions

See Stability-Traction Control Disabled Indicator (Sliding Car OFF Icon). REFER to: Instrument Panel Cluster (IPC) - System Operation and Component Description .

If the stability-traction control mode indicator request is missing or invalid for less than 5 seconds, the IPC defaults the stability-traction control disabled indicator (sliding car OFF icon) to the last indication state (on or off), based upon the last message received.

If the IPC does not receive the stability-traction control mode indicator request for 5 seconds or longer, the IPC defaults the stability-traction control disabled indicator (sliding car OFF icon) off.

When a MyKey ® programmed key is in use and the AdvanceTrac ® on feature is configured always on, the traction control system cannot be disabled and the traction control indicator does not turn on when the traction control disable button is pressed. The traction control indicator still functions correctly to indicate a traction control system fault and a traction control active event.

Possible Sources

- MyKey ® programmed key in use
- Stability-traction control system concern
- Stability-traction control system cannot be disabled
- Communication concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST Z : THE STABILITY-TRACTION CONTROL DISABLED INDICATOR (SLIDING CAR OFF ICON) IS NEVER OR ALWAYS ON > PINPOINT TEST Z : THE STABILITY-TRACTION CONTROL DISABLED INDICATOR (SLIDING CAR OFF ICON) IS NEVER OR ALWAYS ON

Z1 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.