

- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AA : THE TPMS (TIRE PRESSURE MONITORING SYSTEM) WARNING INDICATOR IS NEVER OR ALWAYS ON > PINPOINT TEST AA : THE TPMS (TIRE PRESSURE MONITORING SYSTEM) WARNING INDICATOR IS NEVER OR ALWAYS ON

AA1 CHECK THE TIRE PRESSURE

Verify the tire pressure in all tires meets the recommended tire pressures on the vehicle certification label. REFER to: Identification Codes .

Do all the tires meet the recommended tire pressures?

Yes	GO to AA2
No	CORRECT the tire pressures.

AA2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to AA3

AA3 PERFORM THE BCM (BODY CONTROL MODULE) SELF-TEST

Using a diagnostic scan tool, perform the BCM self-test.

Are any DTCs recorded?

Yes	REFER to: Body Control Module (BCM) .
No	GO to AA4

AA4 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?