

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
No	INSTALL a new HUD. REFER to: Head Up Display (HUD) Module .

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AF : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®) OFF RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON

Normal Operation and Fault Conditions

See Blind Spot Monitoring System (BLIS ®) Off RTT. REFER to: Message Center - System Operation and Component Description .

If the side obstacle detect status-left or side obstacle detect status-right message is missing or invalid for less than 5 seconds, the IPC defaults the Blind Spot Information System (BLIS) off RTT to the last state (on or off), based upon the last message received.

If the side obstacle detect status-left or side obstacle detect status-right message is missing or invalid for 5 seconds or longer, the IPC defaults the Blind Spot Information System (BLIS) off RTT off.

Possible Sources

- Communication concern
- GWM concern
- SODL concern
- SODR concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AF : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®) OFF RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON > PINPOINT TEST AF : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®) OFF RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON

AF1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.