

(adaptive cruise) message is missing or if the data is deemed invalid by the IPC for 5 seconds or longer, the IPC defaults the cruise control indicator off.

Possible Sources

- Communication concern
- Cruise control concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AH : THE CRUISE CONTROL RTT (RECONFIGURABLE TELLTALE) IS NEVER ON > PINPOINT TEST AH : THE CRUISE CONTROL RTT (RECONFIGURABLE TELLTALE) IS NEVER ON

AH1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AH2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

AH2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to AH3