

- BCM concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AI : THE DOOR OR LUGGAGE COMPARTMENT LID AJAR RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON > PINPOINT TEST AI : THE DOOR OR LUGGAGE COMPARTMENT LID AJAR RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON

AI1 CHECK THE MESSAGE CENTER OPERATION

Ignition OFF.

Disconnect GWM C2431 .

Ignition ON.

Monitor the message center messages and RTT indicators.

Did multiple message center messages and RTT indicators appear?

Yes	GO to AI2
------------	-----------

No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .
-----------	---

AI2 CHECK THE INTERIOR LIGHTING OPERATION

Open and close each door while monitoring the interior lamps.

Do the interior lamps operate correctly with each door?

Yes	GO to AI3
------------	-----------

No	REFER to: Interior Lighting .
-----------	-------------------------------

AI3 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
------------	---------------------------