

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AJ : THE DRIVE MODE RTT (RECONFIGURABLE TELLTALE) INDICATORS ARE NEVER OR ALWAYS ON > PINPOINT TEST AJ : THE DRIVE MODE RTT (RECONFIGURABLE TELLTALE) INDICATORS ARE NEVER OR ALWAYS ON

AJ1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AJ2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

AJ2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to AJ3

AJ3 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
No	GO to AJ4