

Yes	Refer to the appropriate article for the procedure.
No	If the engine over-temperature RTT is never on, the system is operating correctly at this time. If the engine over-temperature RTT is always on, INSTALL a new PCM. Refer to the appropriate article for the procedure.

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AL : THE LAUNCH CONTROL RTT (RECONFIGURABLE TELLTALE) IS NEVER ON

Normal Operation and Fault Conditions

See Launch Control RTT. REFER to: Message Center - System Operation and Component Description .

If the launch control message is missing for less than 5 seconds, the IPC defaults the launch control RTT to the last indication state (on or off), based upon the last message received.

If the launch control message is missing for 5 seconds or longer, the IPC flashes the LC RTT image for 2 seconds.

Possible Sources

- Communication concern
- GWM concern
- PCM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AL : THE LAUNCH CONTROL RTT (RECONFIGURABLE TELLTALE) IS NEVER ON > PINPOINT TEST AL : THE LAUNCH CONTROL RTT (RECONFIGURABLE TELLTALE) IS NEVER ON

AL1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.