

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AL2
------------	-----------

No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .
-----------	---

AL2 VERIFY THE LAUNCH CONTROL IS ENABLED THROUGH THE MESSAGE CENTER



NOTE: The IPC and message center navigation can be found in the Owner's Literature.

Using the message center controls, verify the launch control is enabled.

Is the launch control enabled through the message center?

Yes	GO to AL3
------------	-----------

No	The system is operating correctly. The launch control was not enabled.
-----------	--

AL3 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
------------	---------------------------

No	GO to AL4
-----------	-----------

AL4 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
------------	---

No	DIAGNOSE any PCM Diagnostic Trouble Codes (DTCs). Refer to the appropriate article for the procedure.
-----------	---