

- Tachometer concern
- Engine oil pressure sensor
- Base engine concern
- PCM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AO : THE LOW OIL PRESSURE RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON (5.0L AND 5.2L ENGINES) > PINPOINT TEST AO : THE LOW OIL PRESSURE RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON (5.0L AND 5.2L ENGINES)

AO1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AO2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

AO2 CHECK THE TACHOMETER OPERATION

Start the engine.

Verify the tachometer operates.

Does the tachometer operate?

Yes	GO to AO3
------------	-----------