

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to AQ3

AQ3 PERFORM THE BCM (BODY CONTROL MODULE) SELF-TEST

Using a diagnostic scan tool, perform the BCM self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Body Control Module (BCM) .
No	GO to AQ4

AQ4 PERFORM THE PCM (POWERTRAIN CONTROL MODULE) KOEO (KEY ON, ENGINE OFF) SELF-TEST

Using a diagnostic scan tool, perform the PCM KOEO self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	Refer to the appropriate article for the procedure.
No	GO to AQ5

AQ5 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
No	If the powertrain malfunction (wrench) RTT is never on, the system is operating correctly at this time. There are currently no vehicle concerns present that require the powertrain malfunction (wrench) RTT display. If the powertrain malfunction (wrench) RTT is always on, INSTALL a new PCM. Refer to the appropriate article for the procedure.

**DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND
WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AR : THE STEERING MODE
RTT (RECONFIGURABLE TELLTALE) RTT (RECONFIGURABLE TELLTALE) IS NEVER**