

- GWM concern
- VDM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AT : THE CERAMIC BRAKE WARNING MESSAGE IS NEVER OR ALWAYS DISPLAYED (SVT ONLY) > PINPOINT TEST AT : THE CERAMIC BRAKE WARNING MESSAGE IS NEVER OR ALWAYS DISPLAYED (SVT ONLY)

AT1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar warning message.

Open the driver door.

Does the driver door ajar message display with the door open and turn off with the door closed?

Yes	GO to AT2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

AT2 CHECK THE BRAKE PADS FOR WEAR

Inspect the brake pads for wear.

Are the brake pads OK?

Yes	GO to AT3
No	INSTALL new brake pads. Refer to the appropriate article for the procedure.

AT3 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?