

Yes	REFER to DTC Chart: IPC .
No	GO to AT4

AT4 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCs)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
No	DIAGNOSE all brake sensor Diagnostic Trouble Codes (DTCs) in the VDM. REFER to: Vehicle Dynamic Suspension .

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AU : THE CHECK FUEL FILL INLET MESSAGE IS ALWAYS DISPLAYED

Normal Operation and Fault Conditions

See Check Fuel Fill Inlet Message. REFER to: Message Center - System Operation and Component Description .

If the fuel fill inlet message display message is missing for less than 5 seconds, the IPC defaults the check fuel fill inlet message center message to the last indication state, based upon the last message received.

If the fuel fill inlet message display message request is missing for 5 seconds or longer, the IPC defaults the check fuel fill inlet message center message off.

Possible Sources

- Evaporative emissions system concern
- GWM concern
- PCM
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AU : THE CHECK FUEL FILL INLET MESSAGE IS ALWAYS DISPLAYED > PINPOINT TEST AU : THE CHECK FUEL FILL INLET MESSAGE IS ALWAYS DISPLAYED