

WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AV : THE CONVERTIBLE TOP WARNING MESSAGE IS ALWAYS DISPLAYED

Normal Operation and Fault Conditions

See Convertible Top Warning Message. REFER to: Message Center - System Operation and Component Description .

If the convertible top message request is missing for less than 5 seconds, the IPC defaults the convertible top warning message to the last indication state, based upon the last message received.

If the convertible top message request is missing for 5 seconds or longer, the IPC defaults the convertible top warning message off.

Possible Sources

- Convertible top system concern
- Moveable Roof Control Module-A (MRCMA) concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AV : THE CONVERTIBLE TOP WARNING MESSAGE IS ALWAYS DISPLAYED > PINPOINT TEST AV : THE CONVERTIBLE TOP WARNING MESSAGE IS ALWAYS DISPLAYED

AV1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AV2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .