

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AW : THE ENGINE ON WARNING MESSAGE IS ALWAYS DISPLAYED (PUSH BUTTON START ONLY) > PINPOINT TEST AW : THE ENGINE ON WARNING MESSAGE IS ALWAYS DISPLAYED (PUSH BUTTON START ONLY)

AW1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors, the hood and luggage compartment lid.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AW2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

AW2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to AW3

AW3 PERFORM THE BCM (BODY CONTROL MODULE) SELF-TEST

Using a diagnostic scan tool, perform the BCM self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Body Control Module (BCM) .
No	GO to AW4