

- Steering damage or alignment
- Wheel speed sensor
- Wheel speed sensor encoders
- PSCM
- RCM sensors

DIAGNOSIS AND TESTING > ANTI-LOCK BRAKE SYSTEM (ABS) AND STABILITY CONTROL > PINPOINT TESTS > PINPOINT TEST O : C006B:00 > PINPOINT TEST O : C006B:00

O1 VERIFY ABS (ANTI-LOCK BRAKE SYSTEM) MODULE DIAGNOSTIC TROUBLE CODES (DTCs)

Ignition ON.

Using a diagnostic scan tool, carry out the ABS module self-test.

Is DTC C006B:00 the only DTC present in the ABS module?

Yes	GO to O2
No	DIAGNOSE all other ABS module Diagnostic Trouble Codes (DTCs) before diagnosing DTC C006B:00. GO to the DTC Chart: ABS Module in Diagnostic Trouble Code (DTC) Charts .

O2 VERIFY THE TIRE PRESSURE

Verify all tire inflation pressures are correct as indicated on the VC label.

Are the tires inflated to the correct pressure as indicated on the VC label?

Yes	GO to O3
No	ADJUST the tire pressure as necessary.

O3 VERIFY WHEEL AND TIRE SIZE

Verify all the tires and wheels are the same size and the size is correct as indicated on the VC label.

Are all 4 wheels and tires the correct size as indicated on the VC label?

Yes	GO to O4
------------	----------