

- Adaptive cruise control concern
- Communication concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AY : THE ADAPTIVE CRUISE CONTROL WARNING CHIME IS INOPERATIVE > PINPOINT TEST AY : THE ADAPTIVE CRUISE CONTROL WARNING CHIME IS INOPERATIVE

AY1 CHECK THE SAFETY BELT WARNING CHIME OPERATION

Ignition OFF.

Ignition ON.

Unbuckle the driver safety belt.

Monitor the safety belt warning chime when the ignition is transitioned from OFF to RUN for 6 seconds.

Does the safety belt warning chime operate for approximately 6 seconds?

Yes	GO to AY2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

AY2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to AY3

AY3 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?