

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
------------	---

No	GO to AY4
-----------	-----------

AY4 CHECK THE CRUISE CONTROL RTT (RECONFIGURABLE TELLTALE) OPERATION

Verify the adaptive cruise control RTT illuminates when the adaptive cruise control is in operation.

Does the adaptive cruise control RTT illuminate when the adaptive cruise control is active?

Yes	DIAGNOSE the cruise control system. For base cruise control, REFER to: Cruise Control . For adaptive cruise control, REFER to: Cruise Control .
------------	--

No	GO to Pinpoint Test AH
-----------	------------------------

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AZ : THE BACKUP WARNING CHIME IS INOPERATIVE (JAPAN ONLY)

Normal Operation and Fault Conditions

See Backup Warning Chime. REFER to: Warning Chimes - System Operation and Component Description .

Possible Sources

- Communication concern
- Reverse lamps concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AZ : THE BACKUP WARNING CHIME IS INOPERATIVE (JAPAN ONLY) > PINPOINT TEST AZ : THE BACKUP WARNING CHIME IS INOPERATIVE (JAPAN ONLY)

AZ1 CHECK THE SAFETY BELT WARNING CHIME OPERATION

Ignition OFF.