

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BA : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®)/CROSS TRAFFIC ALERT (CTA) WARNING CHIME IS INOPERATIVE

Normal Operation and Fault Conditions

See Blind Spot Information System (BLIS ®) Warning Chime. REFER to: Warning Chimes - System Operation and Component Description .

Possible Sources

- Communication concern
- Blind Spot Information System (BLIS ®)/Cross Traffic Alert (CTA) concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BA : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®)/CROSS TRAFFIC ALERT (CTA) WARNING CHIME IS INOPERATIVE > PINPOINT TEST BA : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®)/CROSS TRAFFIC ALERT (CTA) WARNING CHIME IS INOPERATIVE

BA1 CHECK THE SAFETY BELT WARNING CHIME OPERATION

Ignition OFF.

Ignition ON.

Unbuckle the driver safety belt.

Monitor the safety belt warning chime when the ignition is transitioned from OFF to RUN for 6 seconds.

Does the safety belt warning chime operate for approximately 6 seconds?