

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BE : THE HEADLAMPS ON WARNING CHIME IS INOPERATIVE

Normal Operation and Fault Conditions

See Headlamps On Warning Chime. REFER to: Warning Chimes - System Operation and Component Description .

Possible Sources

- GWM concern
- BCM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BE : THE HEADLAMPS ON WARNING CHIME IS INOPERATIVE > PINPOINT TEST BE : THE HEADLAMPS ON WARNING CHIME IS INOPERATIVE

BE1 CHECK THE SAFETY BELT WARNING CHIME OPERATION

Ignition OFF.

Ignition ON.

Unbuckle the driver safety belt.

Monitor the safety belt warning chime when the ignition is transitioned from OFF to RUN for 6 seconds.

Does the safety belt warning chime operate for approximately 6 seconds?

Yes	GO to BE2
No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .

BE2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?