

Yes	GO to BG2
------------	-----------

No	INSTALL a new IPC. REFER to: Instrument Panel Cluster (IPC) .
-----------	---

BG2 CHECK THE MEMORY SET FEATURE

Verify the memory set procedure can successfully change the memory preferences.

Does the memory set procedure successfully change the memory preferences?

Yes	GO to BG3
------------	-----------

No	REFER to: FRONT SEATS .
-----------	-------------------------

BG3 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
------------	---------------------------

No	GO to BG4
-----------	-----------

BG4 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCs)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
------------	---

No	DIAGNOSE any DSM Diagnostic Trouble Codes (DTCs). REFER to: FRONT SEATS .
-----------	---

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BH : THE PARKING AID CHIME IS INOPERATIVE

Normal Operation and Fault Conditions

See Parking Aid Chime. REFER to: Instrumentation, Message Center and Warning Chimes .

Possible Sources