

Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
------------	---

No	GO to BH4
-----------	-----------

BH4 PERFORM THE PAM (PARKING ASSIST CONTROL MODULE) SELF-TEST

Using a diagnostic scan tool, perform the PAM self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Parking Aid .
------------	-------------------------

No	GO to BH5
-----------	-----------

BH5 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
------------	---------------------------

No	DIAGNOSE the audible parking aid. REFER to: Parking Aid .
-----------	---

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BI : THE PARKING BRAKE WARNING CHIME IS INOPERATIVE

Normal Operation and Fault Conditions

See Parking Brake Warning Chime. REFER to: Warning Chimes - System Operation and Component Description .

Possible Sources

- Brake warning indication concern
- Communication concern
- GWM concern
- IPC

Visual Inspection And Diagnostic Pre-checks