

No	GO to BI4
-----------	-----------

BI4 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: MODULE COMMUNICATIONS NETWORK .
------------	---

No	DIAGNOSE all BCM Diagnostic Trouble Codes (DTCs). REFER to: Body Control Module (BCM) .
-----------	---

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BJ : THE PERIMETER ALARM CHIME IS INOPERATIVE

Normal Operation and Fault Conditions

See Perimeter Alarm Warning Chime. REFER to: Warning Chimes - System Operation and Component Description .

Possible Sources

- Perimeter alarm concern
- BCM
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BJ : THE PERIMETER ALARM CHIME IS INOPERATIVE > PINPOINT TEST BJ : THE PERIMETER ALARM CHIME IS INOPERATIVE

BJ1 CHECK THE SAFETY BELT WARNING CHIME OPERATION

Ignition OFF.

Ignition ON.

Monitor the safety belt warning chime when the ignition switch is transitioned from OFF to RUN for 6 seconds.