

Do the turn signal indicators operate correctly?

Yes	GO to BL3
------------	-----------

No	GO to Pinpoint Test S
-----------	-----------------------

BL3 PERFORM THE BCM (BODY CONTROL MODULE) SELF-TEST

Using a diagnostic scan tool, perform the BCM self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Body Control Module (BCM) .
------------	---------------------------------------

No	DIAGNOSE all GWM Diagnostic Trouble Codes (DTCs). REFER to: MODULE COMMUNICATIONS NETWORK .
-----------	---

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BM : U0100:00

Normal Operation and Fault Conditions

IPC DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
U0100:00	Lost Communication With ECM/PCM "A": No Sub Type Information	Sets in continuous memory in the IPC if data messages received from the PCM through the GWM are missing for 5 seconds or longer.

Possible Sources

- Communication concern
- Battery voltage concern
- GWM concern
- PCM
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BM : U0100:00 > PINPOINT