

Carry out the ICM self-test.

Is DTC U3003:17 present?

Yes	INSTALL a new ICM. REFER to: Information Center Module (ICM) .
No	The system is operating correctly at this time. The DTC may have been set previously during battery charging or while jump starting the vehicle.

GENERAL PROCEDURES > SEATBELT MINDER DEACTIVATING ACTIVATING

Activation

 **WARNING:** Before beginning any service procedure in this article, refer to Safety Warnings in GENERAL INFORMATION . Failure to follow this instruction may result in serious personal injury.

 **NOTE:** The driver and passenger seat Belt-Minder ® deactivating/activating can be carried out using a diagnostic scan tool.

 **NOTE:** If you are using a MyKey ® programmed key, the Belt-Minder ® cannot be disabled and does not time out after 5 minutes. If the Belt-Minder ® has been previously disabled, it is re-enabled when a MyKey ® programmed key is used.

 **NOTE:** The driver and front passenger Belt-Minder ® are deactivated/activated independently. When deactivating/activating one seating position, do not buckle the other position.

1.

Apply the parking brake before deactivating/activating the Belt-Minder ®.

2.

Place the selector lever in Park (P) (automatic transmission) or Neutral (N) (manual transmission).

3.

Place the ignition OFF.

4.

Unbuckle the driver and the front passenger safety belts.