


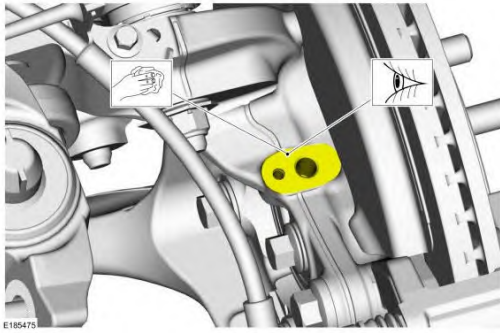

REMOVAL AND INSTALLATION > STABILITY ASSIST TRACTION CONTROL SWITCH > REMOVAL

 **NOTE:** The stability/traction control switch is part of the Front Controls Interface Module (FCIM).

1.

Remove the FCIM. REFER to: FRONT CONTROLS INTERFACE MODULE (FCIM) - Vehicles With: AM/FM/CD/SYNC. Refer to: FRONT CONTROLS INTERFACE MODULE (FCIM) - Vehicles With Touchscreen Display.

REMOVAL AND INSTALLATION > STABILITY ASSIST TRACTION CONTROL SWITCH > INSTALLATION

1.

To install, reverse the removal procedure.